


## BS-07 BEAD SEATER

08.2001

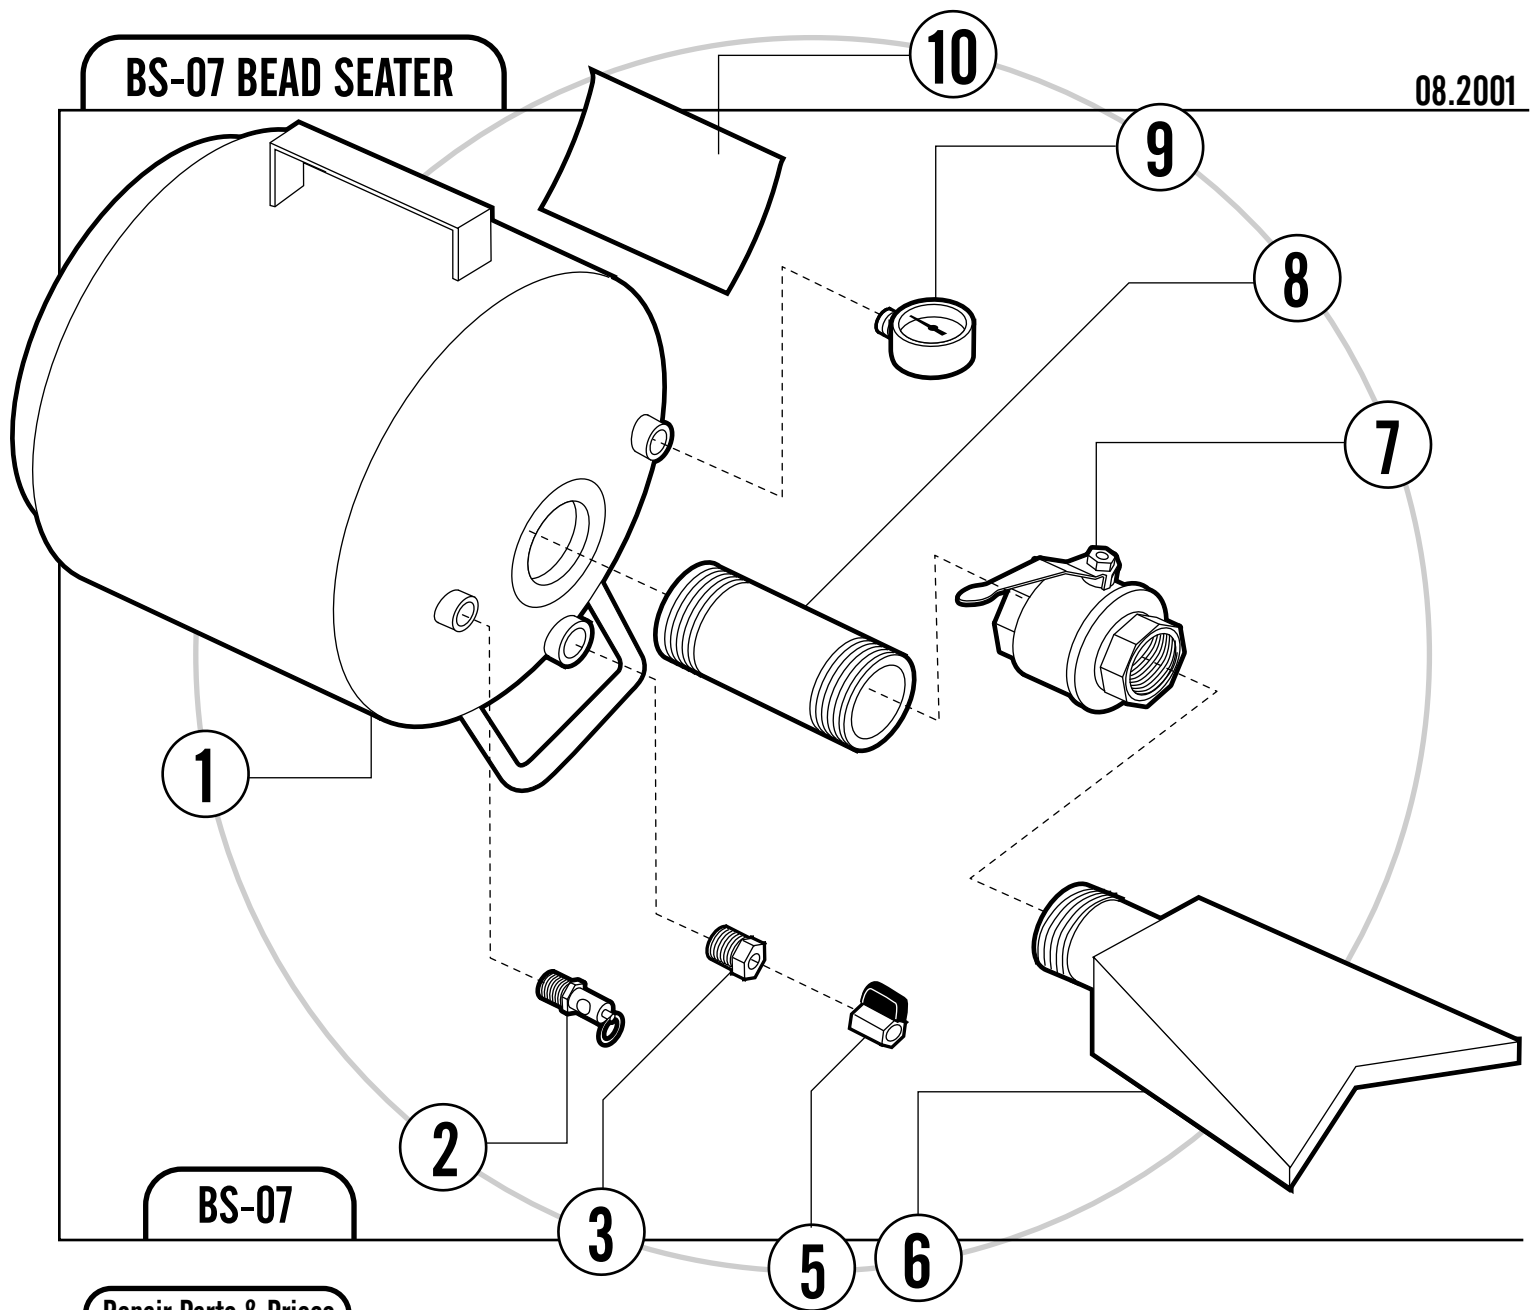

### Repair Parts & Prices

No.	Description	Part No.	No.	Description	Part No.
1.	Air Tank	6814	7.	Discharge Valve*	3.102BS
2.	Safety Release Valve	05.102	8.	6" Pipe Nipple	2.104B
3.	3/4" - 1/4" Bushing	01.107	9.	Pressure Gauge	1.106BS
5.	Ball Valve	04.103	10.	Decal	
6.	Flared Barrel	6813			

**Order parts from your distributor or jobber.** When ordering parts always give the following information: *Part Number, Description and Serial Number of Your Machine.*

\*Includes Handle



3451 South 40th Street · Phoenix, Arizona 85040 · toll free 800.223.4540 · Arizona 602.437.5020 · fax 602.437.5025